








# SWITEL

## Combination set DCT 64072 CP Combo

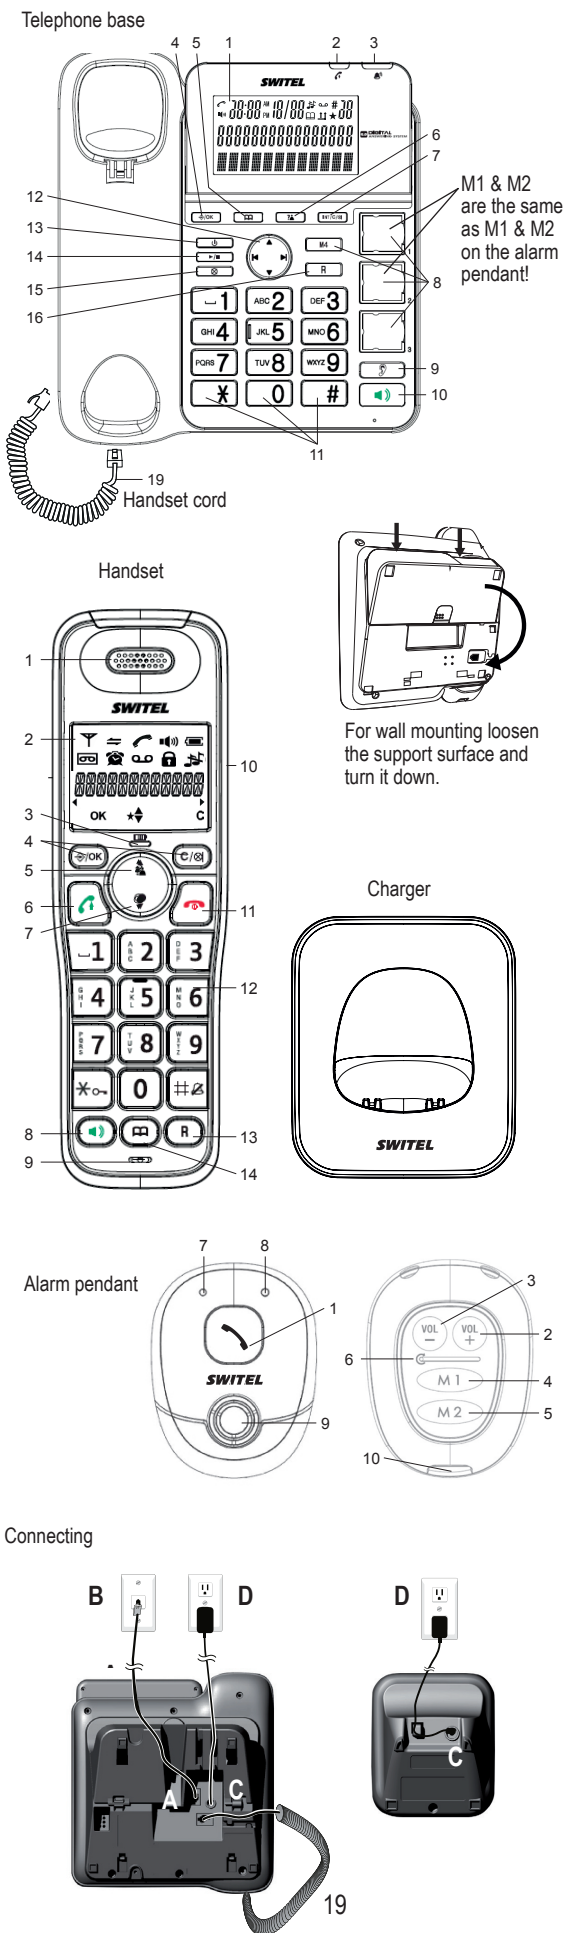

**ENGLISH**

**Operating Instructions**  
Please read and observe the following information and keep the operating manual nearby for future reference!

**WARNING!**  
**Safety information**

- Risk of explosion!
- ➔ Only use the power adapter plugs supplied!
- ➔ Only use batteries supplied or ones of the same type!
- ➔ Always treat batteries with due care and attention and only use batteries as described.
- ➔ Never use standard and rechargeable batteries together. Never use rechargeable batteries or standard batteries with different capacities or charge statuses together. Never use standard or rechargeable batteries which are damaged.
- Risk of suffocation through small objects, packaging and protective foil!
- ➔ Keep children away from the product and its packaging!
- Risks to health and the environment from batteries!
- ➔ Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.
- The cordless handset cannot be used to make calls in the event of a power failure.
- Never use the telephone in the vicinity of medical equipment. Effects on such equipment cannot be fully ruled out.

**CAUTION!**

- Risk of hearing damage!
- ➔ Avoid listening at full receiver volume.

**ATTENTION!**

- Risk of property damage.
- ➔ Prevent exposure to environmental influences, e.g. smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- ➔ Only allow repairs to be completed by qualified personnel.

**INTENDED USE**  
The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Observe all local directives and regulations. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

**PACKAGE CONTENTS**  
1 Telephone base, 1 Corded handset, 1 Handset cord, 2 power adapter plug, 1 Handset, 1 Charger, 1 Telephone connection cable, 2 Rechargeable batteries, 1 Alarm pendant with charger, 1 Operating instruction

**STARTING UP**  
**Connecting the telephone line**  
➔ Connect the telephone cable to the telephone line socket (A).  
➔ Connect the telephone cable to the telephone line wall socket (B).  
➔ Connect the handset cord to the base and handset (19).

**Connecting the power adapter plug**  
➔ Connect the cable of the power adapter plug to base and charger (C).  
➔ Connect the power adapter plug in a properly installed mains power outlet (D)

**Insert the batteries according to the diagram.**  
**ATTENTION!**  
● The batteries or telephone could be damaged. Pay attention that the batteries are inserted correctly. Switch the telephone off before removing the battery compartment cover. Only switch it on again when the battery compartment cover has been replaced.  
● In case of power failure, you can only make calls with the telephone base. It is not possible to dial numbers from memories in base and handset when the mains power is off.

**Charging the batteries**  
● Charge the batteries for at least 10 hours when charging for the first time and ensure they are subsequently discharged and charged fully. This aids a long service life of the batteries.  
➔ Place the handset and the alarm pendant in the charger.

**OPERATING ELEMENTS**

**Base**

- 1 **DISPLAY**
- 2 **IN USE** Flashing during a call
- 3 **RING LIGHT** Flash: Incoming call - new memos or new messages, On: Answering machine is on
- 4 **MENU / OK** Idle: Menu, Sub menu: Confirm, In redial- or call-list: Store in phonebook
- 5 **PHONEBOOK** Idle: Open list
- 6 **CALL LIST** Idle: Open list
- 7 **INT / MUTE / CLEAR** Main menu: Back to idl screen, Sub menu: Back to previous level or press and hold to go back to idl screen, Edit / predial: Clear a character / digit or press and hold to delete all characters / digits, During a call: Mute / unmute the microphone, Ringing: Silence the base ringer, Idle: Intercom another system handset
- 8 **MEMORY KEYS (3 PHOTO / M4)** In predial mode: Press and hold to store the number entered from idle mode. Idle: Press to dial out.
- 9 **BOOSTER** During a call: Activate / deactivate the BOOSTER
- 10 **SPEAKER** Idle / Phonebook / Call- / Redial list view mode: Make a call with speakerphone.
- 11 **ALPHANUMERIC KEYPAD, STAR \*, HASH #** Predial /edit: Insert a digit / character, 0 key: Press and hold to insert a pause
- 12 **NAVIGATION KEYS**  
**UP ▲** In Menu / Phonebook- / Redial- / Call-list: Scroll up, Edit: Move the cursor to the left, During a call or TAM message playback: Increase the volume  
**REPEAT / OGM ◀◀** Idle: Press and hold to record OGM, Playback OGM, In TAM message playback mode: Go back to previous message  
**MEMO / SKIP FORWARD ▶▶** Idle: Press and hold to record a memo, In TAM message playback mode: Skip to next message  
**DOWN / REDIAL LIST ▼** Idle: Open redial list, Menu- / Phonebook- / Redial- / Call-list: Scroll down, Edit: Move the cursor to the right, During a call or TAM message playback: Decrease the volume
- 13 **ANS ON / OFF** Switch the answering machine ON or OFF
- 14 **PLAY / STOP** Idle: Playback messages, During TAM message playback: Stop playing
- 15 **DELETE** In TAM message playback mode: Press to delete the current TAM message, Idle: Press and hold to delete all old messages
- 16 **R** Predial or during a call: Insert a Flash

**Handset**

- 1 **EARPIECE**
- 2 **LCD DISPLAY**
- 3 **CHARGE LIGHT** On when the handset is charging
- 4 **SOFT KEYS**  
**MENU / OK** Idle: Open main menu, Sub-menu: Confirm the selection, During a call: Access Intercom / Phonebook / Redial list / Call list (C/MUTE) Main menu: Back to idle screen, Sub-menu: Back to previous menu or press and hold to go back to idle screen. Edit / predial: Clear a character / digit or press and hold to delete all characters / digits, During a call: Mute / Resume the microphone, Idle: Intercom another handset
- 5 **▲▲?** Idle: Open call list, Menu or Phonebook- / Redial- / Call-list: Scroll up, Edit: Move the cursor to the left, During a call: Increase the listening volume
- 6 **TALK ON** Idle / pre-dial: Make a call, Phonebook- / Redial- / Call list: Make a call to the selected entry, During ringing: Answer a call
- 7 **▼●** Idle: Open the redial list, Menu or Phonebook- / Redial- / Call-list: Scroll down, Edit: Move the cursor to the right, During a call: Decrease the listening volume
- 8 **SPEAKERPHONE** Idle / pre-dial: Make a call in speakerphone mode, Press again to switch to earpiece mode
- 9 **MICROPHONE**
- 10 **BOOSTER** During a call: Activate / deactivate the BOOSTER
- 11 **TALK OFF** During a call: End a call, Idle: Press and hold to power off or on, Menu / edit: Go back to previous menu or press and hold to go back to idle screen.
- 12 **ALPHANUMERIC KEYPAD, STAR \* →0, HASH # ✕** Predial /edit: Insert a digit / character, Idle: →0 Press and hold to enable or disable the keypad lock, Idle: ✕ Press and hold to turn on / off the ringer, 0 key: Press and hold to insert a pause
- 13 **R** Menu / edit: Insert a flash, During a call: Press to answer a new call if you subscribed to *Call Waiting Service* from your service provider
- 14 **PHONEBOOK** Idle: Open the phonebook

**ALARM PENDANT**

- 1 **POWER ON/OFF / TALK** Idle: Make a call or press and hold to power on or off, During a call: End the call, During registration: Exit the registration mode
- 2 **VOLUME UP** During a call: Increase the earpiece volume, During ringing: Increase the ringer volume

- 3 **VOLUME DOWN / FLASH** During a call: Decrease the earpiece volume or press and hold for 2 sec. to do a Flash (R) to answer a second incoming call. During ringing: Decrease the ringer volume
- 4 **M1** Dial the direct Memory M1
- 5 **M2** Dial the direct Memory M2
- 6 **RESET**
- 7 **MICROPHONE**
- 8 **LED INDICATOR**  
(Purple) Steady On: Un-Register, Slow Flash: Registered but the base is not available, Searching or out of range. (Blue) Steady On: Seated in the base and fully charged. Steady on 3s and emit a long beep: Successfully registered. Double flashing: Off hook. Double flashing and on for 2s when just off hook: Off hook but the signal is weak. Hear 3 rapid beeps in every 10s. long flashing: Idle mode and off the base. Continuously flashing: Ringing and can be heard through the speaker. (Red) Steady on: Charging on the base. Long flashing: Battery is low or not on the base and the unit will emit short double beeps. Double flashing: Battery is low while the unit is in use and short double beeps will be emitted. (Red / Blue) Toggling: Registration mode after press and hold Vol(+) and Vol(-) keys for 10s.
- 9 **LOUDSPEAKER**
- 10 **CHARGER CONTACTS**

**The phone settings are always set in the same manner:**  
Press **Menu/OK** button to open the main menu. Then use the ▼▲ buttons to select an entry and confirm it by pressing the **Menu/OK** button. The factory preset **PIN** code is **0000**

Example:  
**Set the language on the base**  
Press **MENU / OK**, then select ▼▲ language, press **MENU / OK**, then select ▼▲ desired language and then press **MENU / OK** to confirm.  
**Set the language on the handset**  
Press **LEFT SOFT KEY**, then select ▼▲ HS settings, press **LEFT SOFT KEY**, then select ▼▲ language, press **LEFT SOFT KEY**, then select ▼▲ desired language and then press **LEFT SOFT KEY** to confirm.

**MENU STRUCTURE**

**Base**  
**PHONEBOOK**  
▶ VIEW ▶ ADD ▶ EDIT ▶ DELETE ▶ DELETE ALL ▶ PB STATUS  
**CALL LOG**  
▶ MISSED ▶ RECEIVED ▶ DIALED  
**DATE & TIME**  
▶ TIME FORMAT ▶ SET CLOCK  
**LANGUAGE**  
▶ ENGLISH ▶ DEUTSCH ▶ FRANÇAIS ▶ ITALIANO ...  
**SETTINGS**  
▶ RING SETUP ▶ DELETE HS ▶ DIAL MODE ▶ FLASH TIME  
▶ KEY TONE ▶ CHANGE PIN ▶ BS DEFAULT  
**PAGE ALL HS**  
**REGISTRATION**  
**ANS. MACHINE**  
▶ MSG PLAYBACK ▶ DELETE ALL ▶ MEMO ▶ TAM ON/OFF ▶ TAM SETTINGS (ANSWER MODE, TAM LANGUAGE, OGM SETTINGS, ANSWER DELAY, RECORD TIME, BS SCREENING, REMOTE ACC, COMPRESSION, CHANGE PIN, TAM DEFAULT)

**Handset**  
**PHONEBOOK**  
▶ VIEW LIST  
under a entry: ▶ ADD ▶ VIEW ▶ EDIT ▶ DELETE ▶ DELETE ALL ▶ PB STATUS ▶ FASTDIAL  
**CALL LIST**  
▶ VIEW LIST  
under a entry: ▶ ADD TO PB ▶ DELETE ▶ DELETE ALL ▶ DETAILS  
▶ CATEGORY  
**BS SETTINGS**  
▶ BS RING RINGER ▶ RING VOLUME ▶ DELETE HS ▶ DIAL MODE  
▶ FLASH TIME ▶ BARGE IN ▶ CHANGE PIN  
**HS SETTINGS**  
▶ RING SETUP ▶ TONE SETUP ▶ SELECT BASE ▶ LANGUAGE  
▶ RENAME HS ▶ HS DISPLAY ▶ AUTO ANSWER ▶ MAILBOX  
**DATE & TIME**  
▶ DATE FORMAT ▶ TIME FORMAT ▶ SET TIME ▶ SET DATE  
**ALARM**  
▶ ON ▶ OFF

**REGISTRATION (BASE 1, 2, 3 or 4)**  
**DEFAULT**  
▶ PIN?  
**ANS. MACHINE**  
▶ MSG PLAYBACK ▶ DELETE ALL ▶ MEMO ▶ TAM ON/OFF ▶ TAM SETTINGS (ANSWER MODE, OGM SETTINGS, ANSWER DELAY, RECORD TIME, COMPRESSION, BS SCREENING, REMOTE ACC, CHANGE PIN)

**REGISTRATION & DE-REGISTRATION**  
(Note: Handset, alarm pendant and base station are pre-registered. Up to five handsets (4 handsets + Pendant) can be registered to a single base station. In the case of re-registration of the alarm pendant, the PIN has to be 0000.)

**Registration the alarm pendant**  
**Base:** Press **MENU / OK**, select ▼▲ REGISTRATION, press **MENU / OK** to see PLEASE WAIT  
**At the same time on Pendant:** Press and hold **VOL+** together with **VOL-** until the LED on pendant toggling between red and blue. Place the Pendant unit close to the Base. A long beep tone is generated and the LED is blue for a while if the registration is successful.

**Registration a handset**  
**Handset:** Press **LEFT SOFT KEY** select ▼▲ REGISTRATION, Press **LEFT SOFT KEY** select ▼▲ BASE (1 - 4), Press **LEFT SOFT KEY** enter PIN.  
**At the same time on Base:** Press **MENU / OK**, select ▼▲ REGISTRATION, press **MENU / OK** to see PLEASE WAIT (if the registration is successful, there will be a confirmation beep).

**De-Registration**  
**Base:** Press **MENU / OK**, select ▼▲ SETTINGS, press **MENU / OK** select ▼▲ DELETE HS, press **MENU / OK** enter PIN, press **MENU / OK** select ▼▲ one of the handsets that you want to de-register, press **MENU / OK** to confirm.

**INTERCOM**  
**Internal Call**  
**Base:** Press **INT / MUTE / CLEAR**, select ▼▲ HS 1 - 5, press **MENU / OK** to connect.  
**Handset:** Press **RIGHT SOFT KEY**, Enter the desired handset number on keypad. Base is "7"

**Call All Handsets**  
**Base:** Press **INT / MUTE / CLEAR**, select ▼▲ ALL HANDSETS, press **MENU / OK** to connect.  
**Handset:** Press **RIGHT SOFT KEY**, Enter "9" on keypad.

**Transfer an External Call**  
**Base:** Press **MENU / OK**, select ▼▲ handset number, press ◀ or ▶ on handset. After connection quit the call on base.  
**Handset:** Press **LEFT SOFT KEY**, select ▼▲ INTERCOM, Press **LEFT SOFT KEY**, Enter the desired handset number on keypad. After connection quit the call on handset.

**Conference Call**  
**Handset:** Press **LEFT SOFT KEY**, select ▼▲ INTERCOM, Press **LEFT SOFT KEY**, Enter the desired handset number on keypad. After connection press and hold \* until CONFERENCE is shown.

**ANSWERING MACHINE**  
(Note: You can not delete new messages before they were listened)  
Press **ANS ON / OFF** to switch the answering machine ON or OFF

**Remote Operation**  
The answering machine can be operated remotely using a tone-dialling (DTMF) telephone (**Set remote acc to "on"**). Dial your own telephone number. If the answering machine is on it will answer after the preset delay. During the announcement press the \* key and enter the PIN. The Remote Feature lets you perform the following functions:

**Button Description**  
2 Delete the playing message  
4 Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.  
5 Play the message  
6 Go to next message  
7 Turn on answering machine  
8 Stop message playback  
9 Turn off the answering machine

**Service hotline**  
In the case of technical problems, contact our Service hotline. Switzerland: Tel. 0900 00 1675 (national charges, Swisscom at time of going to print: CHF 2.60/min). In the case of claims under the terms of guarantee, contact your sales outlet.

**Maintenance**  
Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

**Guarantee**  
SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase. All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer. If your device does show signs of a defect within the period of guarantee, please contact the sales outlet where you purchased the SWITEL device, producing the purchase receipt as evidence. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

**Disposal**  
In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to the laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!  
You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points by local public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities. Packaging materials must be disposed of according to local regulations.

**Declaration of Conformity**  
This device fulfils the requirements stipulated in the Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site [www.switel.com](http://www.switel.com).

**Technical data (All rights reserved)**

Feature	Value
DCT 64072CP Combo	
W x H x D (Handset)	52 x 172 x 21 mm
Weight (Handset)	139 g (incl. battery)
Talking time (Handset)	10 h
Standby (Handset)	100 h
Battery (Handset)	1 x 500mAh NiMH 2,4V
W x H x D (Base)	200 x 135 x 225 mm
Weight (Base)	830 g (incl. Handset)
W x H x D (alarm pendant)	55 x 73 x 22 mm
Weight (alarm pendant)	62 g
Battery (alarm pendant)	Li-ion 450mAh, 3.7V

**Power adaptor plug**  
Using the energy-efficient power adaptor model for alarm pendant unit VT04EEU06045 (input 100-240V ~50-60Hz, 150 mA, output 6V/450mA) and RJ-AS06045E002 (input 100-240V ~50-60Hz, 150 mA, output 6V/450mA) for handset unit.